

Measuring Guide for Fabric Wrapped Cornices

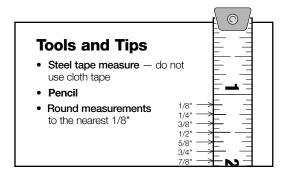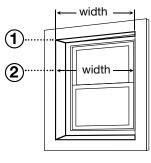

Choose a Mount Type: Inside Mount or Outside Mount





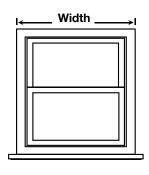


Figure 2

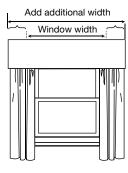


Figure 3

Inside Mount

- Measure the exact width of the window opening at the very top of the casing (figure 1).
- 2 Measure the exact width of the window opening down from the top, depending on the desired drop of top treatments being ordered.

Note: Measure twice and document the smaller dimension, as not all window openings are perfectly square.

 
Outside Mount

- Measure window width including molding (see figure 2).
- 2 Add any additional width desired, especially if hanging curtain panels or sheers under cornice (figure 3).


Premium Fabric-wrapped Cornices

- Measure depth of window casing to determine if it will accommodate an inside mount. An inside mount cornice has a depth of 3" (mounting board/dust cover).
- 2 Determine inside or outside mount.


Note: Face width will be approximately 2" wider than the ordered width



 Face width will be approximately 2" wider



Inside Mount (side view)

 


Outside Mount (side view)





Fabric-wrapped Cornice

• Determine inside or outside mount

   Note: Face width will be approximately $2\frac{1}{2}$ " wider than the ordered width









Inside Mount (side view)

Outside Mount (side view)

Bracket Distance:

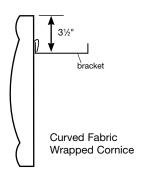

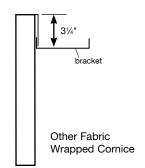

Installation Brackets

	Fabric Wrapped Cornice	Premium Fabric Wrapped Cornice
Finished Width	Number of brackets	Number of brackets
20" - 40"	2	3
40 1/16" - 76"	3	4
76 1/16" - 112"	4	5
112 1/16" - 148"	5	6
148 - 1/16" - 168"	6	7

